

Operating Instructions - Page 1/2



The MIS-08 was designed for the armored vehicle industry to allow the driver to communicate with a person outside, without opening a window and also a passenger in the back of the truck. As well as an intercom, the MIS-08 also includes a Public Address System and a Siren.

The system consists of a main intercom unit which is mounted under the dash board, a paging horn mounted under the hood, a small microphone which is mounted in the outside rear view mirror on the driver's side and a passenger station mounted in the back of the truck. It includes a hand held microphone with push to talk switch which hangs on a clip mounted on the dash. Once installed and connected to the vehicle's 12 volt electrical system, it is ready to use.

To operate the system, simply turn on the power switch. An LED illuminates to indicate that it is functioning.

Outside Mode: Press the "OUTSIDE" button to set the system to outside mode. Adjust the Left Hand volume control (Outside Mic) to obtain the desired volume from the outside microphone. You will hear this through a speaker built into the main unit.

In order to speak to people outside the vehicle, press the talk switch on the hand held microphone and adjust the second volume control (Inside Mic) to the desired level. When you press the talk switch, the internal speaker is muted, so you won't hear your own voice coming back through the outside microphone. You should experiment with this volume level with the window or door open so you can hear it. Once you have determined the level you want, you will probably not need to adjust it again.

To operate the siren, turn on the siren switch on the right side of the unit. There is no external volume control for the siren. It is preset internally.

Alectro Systems Inc.
2861 Sherwood Hts. Dr. Unit 24
Oakville, ON L6J 7K1 Canada

Phone: 905-829-1117, Toll Free 1-866-308-2616


Made In Canada
www.alectro.ca

Operating Instructions - Page 2/2



Passenger Mode: Press the "PASSENGER" button to set the system to passenger mode. This will illuminate the Amber light on the Main Unit. Adjust the Left Hand volume control (Outside), if required, to obtain the desired volume from the passenger microphone. You will hear this through a speaker built into the main unit.

In order to speak to people in the back of the truck, press the talk switch on the hand held microphone. When you press the talk switch, the internal speaker is muted, so you won't hear your own voice coming back through the passenger microphone. There is a volume control on the Passenger Unit for the passenger to adjust the volume level of the driver's voice.

Passenger Call: In order for the passenger to initiate a conversation with the driver, press the "CALL" button on the Passenger Station. This will illuminate the Red Call lights on both the Main Unit and the Passenger Station. It will also sound a Buzzer in the Main Unit and automatically switch the system to Passenger Mode.

At this point, it operates as described above in the Passenger Mode description.